

LCD OSD QUICK REFERENCE

The LCD OSD allows you to set up and configure the LCD display parameters:

- ♦ To bring up the LCD OSD main menu, press the button marked *Menu*.
- ♦ Use the ▲ and ▼ buttons to navigate and make adjustments with; after navigating to a setting choice, use the *Menu* button to bring up the adjustment screen.
- ♦ When making adjustments, ▲ increases the value; ▼ decreases the value.
- ♦ When you are satisfied with your adjustment, press *Exit* to return to the OSD main menu.
- ♦ When all your adjustments have been made, press *Exit* to close the LCD OSD.

An explanation of the settings is given in the table below:

Auto Adjust	Automatically configures all the settings for the LCD panel to what the OSD considers the optimum values
Brightness	Adjusts the background black level of the screen image.
Contrast	Adjusts the foreground white level of the screen image.
Phase	Adjusts the vertical size of the screen image.
Clock	Adjusts the horizontal size of the screen image.
H-Position	Positions the display area on the LCD panel horizontally (moves the display area left or right).
V-Position	Positions the display area on the LCD panel vertically (moves the display area up or down).
Color Adjustment	Adjusts the color quality of the display. You can adjust the "warmth" value, color balance, etc. The <i>Adjust Color</i> selection has a further submenu that lets you fine tune the RGB values.
Language	Selects the language that the OSD displays its menus in.
Recall	Resets the adjustments on all menus and submenus to their factory default settings.

© Copyright 2002 ATEN[®] International Co., Ltd.
Manual Part No. PAPE-1203-200
Printed in Taiwan 12/2002

All brand names and trademarks are the registered property of their respective owners.

2002-12-10