

RS-232C LINE DRIVER
IC-150
User's Manual

@Copyright 1990 **ATEN®** International Co., Ltd.
Manual part NO. PAPE-0076-100

PACKAGE CHECKLIST

When you purchase this product, it should contain the following elements:

- **A Line Driver IC-150**
- **An IC-150 User's Manual**

TABLE OF CONTENTS

1	FUNCTION OVERVIEW	1
	1-1 Introduction	1
	1-2 Function Specifications	2
	1-3 Description	4
2	INSTALLATION	5
	2-1 Installation	5
	2-2 Switch Function Description	6
3	OPERATING PROCEDURE	8
	APPENDIX	12
	Trouble Shooting	12
	RS-232 Pin-Out	14
	Preventing Radio & TV Interference	16

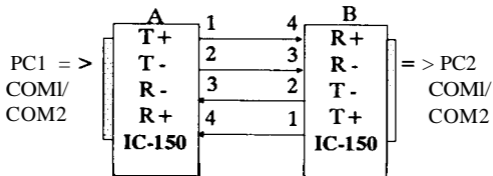


Figure 3-1.1 IC-150 Configuration

SW1 \ SW2	DCE		DTE	
	T+/T-	R+/R-	T+/T-	R+/R-
Full Duplex	Rx pin 2	Tx pin 3	Rx pin 3	Tx pin 2
Tx(DCE) or Rx(DTE)	R x pin 2	DTR pin 6	DSR pin 6	Tx pin 2
Rx(DCE) or Tx(DTE)	DSR pin 20	Tx pin 3	Rx pin 3	DTR pin 20

Table 3-1.1 SW1 and SW2 Set-up

humidity and electromagnetic interference prevails. Do not use harsh solvents.

If you still have problem after aforesaid solutions, please contact your dealer for help.

